

**TOMTOM GO CLASSIC / GO  
CLASSIC LITE / GO  
ADVANCED USER MANUAL**



# CONTENTS

## GET GOING

---

4

Device mounting .....	4
Powering on and off .....	4
Sharing information with TomTom .....	4
Caring for your TomTom GO Classic / GO Classic Lite / GO Advanced.....	4

## CONNECTING A SMARTPHONE

---

5

Linking your device and smartphone .....	5
How to connect with Bluetooth® wireless technology. ....	5
Unlinking your phone .....	5
Checking your phone's connection .....	5

## CONNECTING TO A WIRELESS NETWORK

---

5

Connecting to Wi-Fi® .....	5
Disconnecting from Wi-Fi .....	5

## MAP, SERVICE AND SOFTWARE UPDATES

---

6

Why it's important to download updates .....	6
Installing a software update .....	6
Installing a map region .....	6
Deleting a map region .....	6
Resetting map .....	6

<b>APPEARANCE</b>	6
Display .....	6
Route bar.....	7
ROUTE PLANNING .....	7
<b>SOUNDS &amp; WARNINGS</b>	8
VOICES.....	8
<b>INSTRUCTION SETTINGS</b>	8
<b>LANGUAGE &amp; UNITS</b>	8
<b>SYSTEM</b>	9
<b>MY PLACES</b>	9
Deleting a location from My Places .....	9
Deleting a recent destination from My Places .....	9
<b>MY ROUTES</b>	9
<b>SPEED CAMERAS</b>	10
About TomTom Speed Camera Alerts .....	10
Reporting a speed camera location .....	10
Tap the speed camera symbol on the speed panel in the guidance view .....	10
Updating location information for cameras and hazards .....	10
<b>DANGER AND RISK ZONES</b>	10
<b>QUICK DEVICE FIXES</b>	11
Device does not start or stops responding to commands .....	11
<b>ADDENDUM</b>	12
<b>SAFETY MESSAGES</b>	12
<b>ENVIRONMENTAL AND BATTERY INFORMATION</b>	13
<b>TERMS AND CONDITIONS: LIMITED WARRANTY AND EULA</b>	14
Notices.....	15



# GET GOING

## Device mounting

To properly mount and charge your TomTom GO Classic / GO Classic Lite / GO Advanced follow the below steps:

1. Connect the USB cable to the device.

**NOTE:** Use only the USB cable supplied with your TomTom GO Classic / GO Classic Lite / GO Advanced. Other USB cables may not work.

2. Connect the USB cable to the USB car charger (not included with TomTom GO Classic / GO Classic Lite / GO Advanced) and plug this into the power supply on your dashboard.

3. Choose a decent location on your windscreen to mount your TomTom GO Classic / GO Classic Lite / GO Advanced.

**Tip:** You can easily change the rotation of your device by releasing the mount from the TomTom GO Classic / GO Classic Lite / GO Advanced using the thumb indent. Turn the mount around and clip it back onto the device until you hear it click.

4. Make sure that both the suction cup on the mount and your windscreen are clean and dry.

5. Press the suction cup of the mount firmly against your windscreen.

6. Turn the rubber grip near the base of the mount in a clockwise direction until you feel it lock.

**Note:** For the best navigation experience it is advised to keep your TomTom GO Classic / GO Classic Lite / GO Advanced charged at all times during your drive.

Make sure that your device does not obstruct your dashboard, vehicle controls, rear-view mirrors, airbags and field of vision. To maintain an optimal satellite signal, ensure that your device remains upright during use.

**NOTE:** To ensure that your TomTom GO Classic / GO Classic Lite / GO Advanced screen remains sufficiently powered throughout your drives, we advise you to (i) confirm the strength (i.e., voltage) of the power supplied by your vehicle Car Power Adapter or USB port and (ii) use the charger included with your TomTom GO Classic / GO Classic Lite / GO Advanced accessories for optimal performance.

## Powering on and off

Switch on your device by pressing the On/Off button

Press and hold the On/Off button for two (2) seconds then tap either **Turn off** or **Sleep** to switch off your device or to activate sleep mode.

Pressing and holding the On/Off button for more than five (5) seconds will switch off your device.

## Sharing information with TomTom

Upon activating your TomTom GO Classic / GO Classic Lite / GO Advanced (i.e., during the First Run Wizard), we will ask for your consent to share data about your locations and stored routes.

Doing this will help us improve our products. The collected information will be stored on your device until we retrieve and anonymize it. If you use TomTom Services (live traffic, speed camera alerts), we will use your location information to deliver these services to you. Once you have set up your information sharing preferences, you can adjust them as follows:

### Go to Settings in the main menu

4. Tap **System**
5. Then **Your information and privacy**
6. Now turn off information sharing

To see more about what we are doing to protect your privacy, please visit [tomtom.com/privacy](http://tomtom.com/privacy)

**NOTE:** Information sharing allows for the smooth operation of TomTom Services including traffic and speed cameras. Withholding consent to share your location information will disable your TomTom Services.

## Caring for your TomTom GO Classic / GO Classic Lite / GO Advanced

To ensure optimal device performance:

1. Do not open your device's housing. Doing so is dangerous and will invalidate your device's warranty.
2. Use a soft cloth to wipe and dry your device's screen. Avoid using liquid cleaners.



# CONNECTING A SMARTPHONE

## Linking your device and smartphone

Connecting your iPhone or Android to your device gets you the ease and safety of TomTom Services such as real-time traffic information and speed camera alerts.

### How to connect with Bluetooth® wireless technology.

1. Switch on Bluetooth on our Smartphone. Make your Smartphone discoverable
2. Go to **Settings** on your Smartphone and enable Personal Hotspot / Bluetooth-tethering
3. On your TomTom device go to **Settings**, then **Bluetooth** and then **Add phone**
4. Tap on the question mark on the right bottom and then 'Not interested in all of these features?'
5. Follow the instructions on your TomTom device
6. Select your Smartphone from the list of available devices
7. Accept the pairing request on your Smartphone
8. Select **Pair** on your TomTom device and you are ready to receive TomTom Services

## Unlinking your phone

To safely unlink, go to **Bluetooth**.

Under **Paired phones**, tap the settings icon next to your phone's name and confirm Forget.

**NOTE:** You can clear your pairing through the **Bluetooth settings** on your phone. Resetting your device will also unlink your phone.

## Checking your phone's connection

1. Go to the **Settings** menu and select **Bluetooth** to see the phone pairing list
2. Select the smartphone you want to connect to.

**NOTE:** make sure that

- + Smartphone is displayed on your device
- + Bluetooth is switched on
- + Your data plan is active

# CONNECTING TO A WIRELESS NETWORK

## Connecting to Wi-Fi®

You can update your device's software and map updates wirelessly. To protect your device's security, and to accelerate the speed of downloads, we recommend using an unrestricted (i.e., personal, private) wireless network.

1. Go to **Settings** in the main menu
2. Select your wireless network you want to connect to and login using your networks password
3. Tap **Done** then **Connect**

**NOTE:** If you do not have access to a wireless network, or if your wireless network is slow, you can update applicable items on your device using your computer's internet connection via a wired USB connection. Map downloads are only available via Wi-Fi.

## Disconnecting from Wi-Fi

1. Go to Settings in the main menu
2. Select the wireless network you connected to.
3. Tap Modify then Forget

**NOTE:** the wireless network that you have disconnected from will remain in your list of available networks, however your device will no longer connect to it automatically.



# MAP, SERVICE AND SOFTWARE UPDATES

## Why it's important to download updates

To ensure that you are driving with up-to-date road and traffic information, we recommend downloading and installing map region updates, services (e.g., speed cameras) and software updates as soon as they become available.

## Installing a software update

1. Go to **Settings > Updates & New Items**
2. From the list, choose the updates you want to install; this list includes items you bought at TomTom's web shop
3. Sign into your TomTom account following the prompt

 During updates, keep your device connected to a power supply.


## Installing a map region

1. Make sure there is an active internet connection via Wi-Fi
2. Then go to **Main Menu > Settings > Maps > Add a map**

## Deleting a map region

1. Go to **Main Menu > Settings > Maps > Delete maps** and tap **Delete**
2. Now select the region/s you want to delete

**NOTE:** Installing and updating map regions must be done via Wi-Fi. If the internet connection to the TomTom server is broken or inactive, the **Add** buttons will be disabled.

 To speed up the download time you may want to select only the countries you want to update instead of all. Installing multiple countries at the same time might need to be done in several steps.

## Resetting map

In case of issues with a map or its regions, you can recover your base map in **Main Menu > Settings > System > Reset map**

If there is a pending System Update, you will be required to install that update first. The current base map and its installed regions will be deleted from the device and a base map will be reinstalled. You will then be asked to reinstall at least one map region.

# APPEARANCE

1. Go to **Settings** in the main menu
2. Tap **Appearance**

Now, you can change the following settings.

- + Display
- + Route bar
- + Show POI lists on map
- + Guidance view
- + Automatic zoom
- + Motorway exit previews
- + Automatic map view switching

## Display

Here you can enable your display settings.

- + Theme colour
- + Size of text and buttons



- + Brightness
- + Switch to night colours when dark

**NOTE:** Your device shows the map view when displaying an alternate route and the guidance view when your vehicle is in motion.

## Route bar

Select **Route bar** to change the details shown on the route bar. You can select the route information you want to have displayed in the route bar, show current time and more. You can also adjust your device to switch automatically between your remaining time and distance calculations.

## ROUTE PLANNING

Here you can input your routing preferences, including:

- + Rerouting (Manual, Automatic, None)
- + Preferred route type (Fast, Shortest, Efficient)
- + What to avoid (ferries / car shuttle trains, toll roads, unpaved roads, carpool lanes, motorways, tunnels)



## SOUNDS & WARNINGS

1. Go to **Settings** in the main menu
2. Tap **Sounds & Warnings**

Here you can choose what types of Camera and Safety warning alerts you would like to receive, and when you receive them, for the following features and services:

- + Cameras: Fixed and mobile speed cameras
- + Cameras: Mobile hotspots
- + Cameras: Average speed zones
- + Cameras: Speed enforcement zones
- + Cameras: Red light cameras
- + Cameras: Traffic restriction cameras
- + Safety warnings: Danger zones
- + Safety warnings: Accident black spots
- + Safety warnings: Risk zones
- + Alerts: When speeding
- + Alerts: Traffic jam ahead

You can also choose whether to activate screen touch sounds.

**NOTE:** you can adjust the frequency of warnings, choosing to turn off warnings altogether, to receive them when you are approaching an incident or speed camera too quickly, or to receive them for every incident and speed camera along your route.

## VOICES

1. Choose your preferred voice for sharing guidance and alerts from a range of voices available in your chosen language.
2. Tap on a voice to hear a preview. To confirm your chosen voice, make sure it is selected and then tap the back arrow.

## INSTRUCTION SETTINGS

Choose whether you would like **Arrival time, Early instructions, Road numbers, Road sign info, Street names** or **Foreign street names** read aloud. Tap the toggle of the prompts you would like to be read aloud.

## LANGUAGE & UNITS

1. Go to **Settings** in the main menu
2. Tap **Language and Units** to change the following:

- + Language
- + Country
- + Keyboard layout/language
- + Measurement units
- + Time and date formatting





## SYSTEM

Go to **Settings** in the main menu

Tap **System** for:

- + About
- + Choose a search mode
- + Format memory card
- + Reset device
- + Battery settings
- + Your information & privacy

## MY PLACES

### Deleting a location from My Places

1. Go to **My Places** in the main menu
2. Tap **Edit** list
3. Select the locations you want to delete and tap **Delete**

### Deleting a recent destination from My Places

1. Go to **My Places** in the main menu
2. Tap **Recent destinations**
3. Then **Edit list**
4. Select the destinations you want to remove and tap **Delete**

## MY ROUTES

My Routes provides an easy way to save and retrieve routes and tracks, be it your route to work, planned vacation routes or regular routes taken to visit friends or family.

You can create your own routes and synchronize them with your sat nav via [Plan.TomTom.com](http://Plan.TomTom.com)



# SPEED CAMERAS

## About TomTom Speed Camera Alerts

TomTom's Speed Camera Alerts service warns you about the locations of the following hazards and traffic enforcement cameras:

- + Fixed and mobile speed cameras: check the speed of passing vehicles
- + Mobile speed camera hotspots: show where mobile speed cameras are often used
- + Average speed camera: measure your average speed between two points
- + Speed enforcement zones: contain multiple speed cameras
- + Red light cameras: check for vehicles' traffic violations at traffic lights
- + Traffic restriction cameras: alert you to roadways that are restricted
- + Accident blackspot locations: places where traffic accidents have frequently occurred

You can access the Speed Camera Alerts service on your TomTom GO Classic / GO Classic Lite / GO Advanced through an active internet connection.

**NOTE:** TomTom's Speed Camera Alerts service may not be available in the country you are driving through. For drivers traveling through France, TomTom provides the Danger and Risk Zone Warnings service. In Switzerland and Germany, the use of devices that alert users to the locations of fixed and mobile speed camera locations are prohibited. In compliance with these laws, speed camera alerts have been deactivated on all TomTom GPS Sat Navs. You can, however, reactivate these alerts for travel outside Germany and Switzerland. Since the legality of speed camera alerts varies throughout the EU, this service is available for use at your own risk. TomTom assumes no liability for your use of these alerts and warnings.

## Reporting a speed camera location

If you pass a speed camera location that you did not receive an alert about, please report it. Make sure you are connected to TomTom services and are signed in to your TomTom account. Once you have reported the camera's location, the details will be saved to your device, anonymized and then shared with other drivers. You can report speed camera locations by applying the following steps

## Tap the speed camera symbol on the speed panel in the guidance view

To confirm that your speed camera report has been registered, you will see a message thanking you for the update

**NOTE:** to delete a speed camera report, tap **Cancel** in the message.

## Updating location information for cameras and hazards

Just after you pass the known location of a mobile speed camera, you will be asked in a route bar message if the camera is still there. Tap **Yes** to confirm or **No** to update camera location information.

# DANGER AND RISK ZONES

TomTom's Danger and Risk Zone Warnings service is configured specifically for travel on roadways throughout France.

Since January 3, 2012, it has been illegal to receive warnings about the locations in France of fixed and mobile speed cameras.

In compliance with this law, your TomTom GO Classic / GO Classic Lite / GO Advanced will warn you when you are approaching danger zones and risk zones (as opposed to speed camera locations).

**NOTE:** danger zones are designated, permanent locations. Risk zones are reported by motorists and are classified as "temporary" danger zones.

Since danger zones and risk zones may contain one (1) or more speed cameras and driving hazards, the danger zone icon will be displayed as you approach either zone. The minimum length of these zones is 300m [0.19 miles] for roads in urban areas, 2000m [1.24 miles] for secondary roads and 4000m [2.49 miles] for motorways.

- + Speed camera locations are now unavailable and have been replaced by a danger zone icon that will be



displayed as you approach designated zones

+ The length of the zone depends on the road type and can be 300m, 2000m or 4000m

+ More than one (1) speed camera may be located within each danger zone

+ If speed camera locations are close together within a single danger zone, your danger zone warnings may merge and result in the length of the upcoming danger zone being extended. Please note that outside France, you will receive alerts about speed camera locations. Inside France, you will receive warnings about danger zones and risk zones.

## QUICK DEVICE FIXES

### **Device does not start or stops responding to commands**

If your device is not responding, first check that your device's battery is charged.

Your device will alert you when its battery charges are low and critically low. Low and critically low battery charges will cause your device to lose its connection to TomTom services. If your battery's charge is depleted, your device will switch to sleep mode.

If this doesn't solve the problem, you can perform a restart. To do this, press and hold the On/Off button until you see the TomTom logo and hear the drum roll.



# ADDENDUM

## Important Safety Notices and Warnings

### Global Positioning System (GPS), Global Navigation Satellite Systems (GLONASS) and Galileo

The Global Positioning System (GPS), Global Navigation Satellite System (GLONASS) and Galileo systems are satellite-based systems that provide location and timing information around the globe.

GPS is operated and controlled by the Government of the United States of America, which is solely responsible for its availability and accuracy.

GLONASS is operated and controlled by the Government of Russia, which is solely responsible for its availability and accuracy.

GALILEO is operated by the European GNSS Agency (GSA), which is solely responsible for its availability and accuracy.

Changes in GPS, GLONASS or GALILEO availability and accuracy, or in environmental conditions, may impact the operation of this device. TomTom disclaims any liability for the availability and accuracy of GPS, GLONASS or GALILEO.

If you identify any safety risks associated with this TomTom product, please contact us at [productquestions@tomtom.com](mailto:productquestions@tomtom.com).

## SAFETY MESSAGES

### Important! Read before use!

Death or serious injury could result from failure or partial failure to follow these warnings and instructions. Failure to properly set up, use, and care for this device can increase the risk of serious injury or death, or damage to the device.

### Use with care warning

It is your responsibility to use best judgment, due care and attention when using this device. Do not allow interaction with this device to distract you while driving. Minimize the time spent looking at the device screen while driving. You are responsible for observing laws that limit or prohibit the use of mobile phones or other electronic devices, for example, the requirement to use hands-free options for making calls when driving. Always obey applicable laws and road signs, especially those relating to your vehicle's dimensions, weight, and payload type. TomTom does not guarantee the error-free operation of this device, nor the accuracy of route suggestions provided and shall not be liable for any penalties arising from your failure to comply with applicable laws and regulations.

### Proper mounting

Do not mount the device in a way that may obstruct your view of the road or your ability to control the vehicle. Do not place the device in an area that may obstruct the deployment of an airbag or of any other safety feature of your vehicle.

### Pacemakers

Pacemaker manufacturers recommend that a minimum of 15cm / 6 inches be maintained between a handheld wireless device and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with independent research and recommendations by Wireless Technology Research.

Guidelines for people with pacemakers:

- You should ALWAYS keep the device more than 15cm / 6 inches from your pacemaker.
- You should not carry the device in a breast pocket.

### Other medical devices

Please consult your physician or the manufacturer of the medical device, to determine if the operation of your wireless product may interfere with the medical device.

### Device care

It is important to take care of your device:

- Do not open the casing of your device under any circumstances. Doing so may be dangerous and will invalidate the warranty.
- Wipe or dry the screen of your device using a soft cloth. Do not use any liquid cleaners.

### Rating:

**4YF50 DC5V, 2.4A**

**4YF60 DC5V, 2.4A**

### How TomTom uses your information

Information regarding the use of personal information can be found at: [tomtom.com/privacy](http://tomtom.com/privacy).



# ENVIRONMENTAL AND BATTERY INFORMATION

## Your device

Do not disassemble, crush, bend, deform, puncture, or shred your device. Do not use it in a humid, wet and/or corrosive environment. Do not put, store, or leave the device in a high temperature location, in direct sunlight, in or near a heat source, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 50°C (122°F) or below -20°C (-4°F). Avoid dropping the device. If the device is dropped and you suspect damage, please contact customer support. Use the device only with the chargers, mounts or USB cables provided. For TomTom approved replacements, go to [tomtom.com](http://tomtom.com).

## Operating temperature

This device will remain fully operational within the temperature range 32°F / 0°C to 113°F / 45°C. Prolonged exposure to higher or lower temperatures can cause damage to your device and is therefore advised against. Temperatures: Standard operation: 32°F / 0°C to 113°F / 45°C; short period storage: -4°F / -20°C to 122°F / 50°C; long period storage: -4°F / -20°C to 95°F / 35°C.

Important: Before you switch on the device, let the device acclimatize to the standard operation temperature range for at least 1 hour. Do not use the device outside of this temperature range.

## Device battery (non-replaceable)

This product contains a lithium-ion battery. Do not modify or re-manufacture the battery. Do not attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion, or another hazard. Do not short circuit a battery or allow metallic conductive objects to contact battery terminals. Do not attempt to replace or remove the battery yourself unless the user manual clearly indicates that the battery is user replaceable. For TomTom GO Classic / GO Classic Lite / GO Advanced, a qualified professional should remove the battery. User replaceable batteries must only be used in systems for which they are specified.

**Caution:** Risk of explosion if the battery is replaced by an incorrect type. If you have a problem with the battery, please contact TomTom Customer Support. The stated battery life is the maximum possible battery life which is based on an average usage profile and can only be achieved under specific atmospheric conditions. To prolong the battery life, keep the device in a cool, dry place and follow the tips specified in this FAQ: [tomtom.com/batterytips](http://tomtom.com/batterytips). Charging will not occur at temperatures below 32°F / 0°C or over 113°F / 45°C.

Failure to follow these guidelines may cause the battery to leak acid, become hot, explode, or ignite and cause injury and/or damage. Do not attempt to pierce, open, or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately.

## Battery waste disposal

THE BATTERY CONTAINED IN THE PRODUCT MUST BE RECYCLED OR DISPOSED OF PROPERLY ACCORDING TO THE LOCAL LAWS AND REGULATIONS AND ALWAYS KEPT SEPARATE FROM HOUSEHOLD WASTE. BY DOING THIS YOU WILL HELP CONSERVE THE ENVIRONMENT.



## WEEE – e-waste disposal

In the EU/EEA, this product is marked with the wheellie bin symbol on its body and/or packaging as required by Directive 2012/19/EU (WEEE). This product shall not be treated as household waste or be disposed of as unsorted municipal waste. You can dispose of this product by returning it to the point of sale or bringing it to your local municipal collection point for recycling. Outside of the EU/EEA, the wheellie bin symbol may not have the same meaning. More information about national recycling options can be requested from a responsible local authority. It is the responsibility of the end user to comply with local law when disposing of this product.

## Triman logo



# TERMS AND CONDITIONS: LIMITED WARRANTY AND EULA

Our terms and conditions, including our limited warranty and end user license terms apply to this product. Visit [tomtom.com/legal](http://tomtom.com/legal).

## This document

Great care was taken in preparing this document. Constant product development may mean that some information is not entirely up to date. The information is subject to change without notice. TomTom shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the performance or use of this document. This document may not be copied without the prior written consent from TomTom N.V.

## Model number

**TomTom GO Classic / GO Classic Lite / GO Advanced 5": 4YF50**

**TomTom GO Classic / GO Classic Lite / GO Advanced 6": 4YF60**

## CE mark and Radio Equipment Directive for TomTom GO Classic / GO Classic Lite / GO Advanced



### EU Specific Absorption Rate (SAR) compliance

THIS WIRELESS DEVICE MODEL MEETS GOVERNMENT REQUIREMENTS FOR EXPOSURE TO RADIO WAVES WHEN USED AS DIRECTED IN THIS SECTION

This GPS Navigation System is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Council of the European Union.

The SAR limit recommended by The Council of the European Union is 2.0W/kg averaged over 10 grams of tissue for the body (4.0 W/kg averaged over 10 grams of tissue for the extremities - hands, wrists, ankles, and feet). Tests for SAR are conducted using standard operating positions specified by the EU council with the device transmitting at its highest certified power level in all tested frequency bands.

**Note:** All device models are supplied with an installation guide.

## UKCA logo and Radio Equipment Regulations for TomTom GO Classic / GO Classic Lite / GO Advanced



### Responsible Party in the United Kingdom

TomTom's UK representative is TomTom Sales B.V. (UK Branch), 1st floor South Wing, 2 Fleming Building, Edinburgh Technopole, Milton Bridge, Midlothian EH26 0BE, United Kingdom.

This device can be used in all EU Member States and the United Kingdom. The frequency bands and the maximum radio frequency emission power in which this device operates are as follows:

Model	Frequency band (Bluetooth)	Maximum radio frequency emission power	Frequency band (Wi-Fi 2.4G)	Maximum radio frequency emission power	Frequency band (Wi-Fi 5G)	Maximum radio frequency emission power	Frequency band (Wi-Fi 5G)	Maximum radio frequency emission power	Frequency band (Wi-Fi 5G)	Maximum radio frequency emission power	Frequency band (Wi-Fi 5G)	Maximum radio frequency emission power
4YF50	2402~2480 MHz	9.98 dBm	2412~2472 MHz	19.88 dBm	5180~5240 MHz	15.98 dBm	5260~5320 MHz	19.88 dBm	5500~5700 MHz	19.88 dBm	5745~5825 MHz	13.98 dBm
4YF60	2402~2480 MHz	9.98 dBm	2412~2472 MHz	19.88 dBm	5180~5240 MHz	15.98 dBm	5260~5320 MHz	19.88 dBm	5500~5700 MHz	19.88 dBm	5745~5825 MHz	13.98 dBm



Restriction applies in AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/ FI/SE/CH/UK(NI)/HR

Operation in 5150~5250MHz is restricted to indoor use only, including installations inside road vehicles.

Operation in the band 5250-5350Mhz is only for indoor use to reduce the potential for harmful interference.

Hereby, TomTom declares that the radio equipment type TomTom GO Classic / GO Classic Lite / GO Advanced GPS Navigation system is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [http://www.tomtom.com/en\\_gb/legal/declaration-of-conformity/](http://www.tomtom.com/en_gb/legal/declaration-of-conformity/)

In addition, TomTom declares that the radio equipment type TomTom GO Classic / GO Classic Lite / GO Advanced is in compliance with Regulations 2017 No. 1206 as amended (UK S.I. 2017 No. 1206). The full text of the UK declaration of conformity is available at the following internet address: [http://www.tomtom.com/en\\_gb/legal/declaration-of-conformity/](http://www.tomtom.com/en_gb/legal/declaration-of-conformity/)

## Notices

### TomTom notices

© 1992 - 2024 TomTom N.V. All rights reserved. TOMTOM, its logo, and GO are unregistered or registered trademarks of TomTom International B.V. or its affiliates in the European Union, the United States of America, and other countries.



### Third party attribution notices

Wi-Fi® is a registered trademark of Wi-Fi Alliance®. Cerence® is a registered trademark of Cerence Operating Company and is used here under license. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by TomTom is under license. Other trademarks and trade names are those of their respective owners.

### Other third party licenses and/or OSS notices and licenses

The software included in this product contains copyrighted software that is licensed under open source licenses. A copy of the applicable licenses can be viewed in the License section. You can obtain the complete corresponding source code from us for a period of three years after our last shipment of this product. For more information, visit [tomtom.com/opensource](http://tomtom.com/opensource) or contact your local TomTom customer support team at [help.tomtom.com](mailto:help.tomtom.com). Upon request, we will send you a CD with the corresponding source code.

